


OWNER'S MANUAL

Model: AG25LG5FHGD-GR

(25 Gallon Lawn & Garden Trailer Sprayer - GREEN Frame)

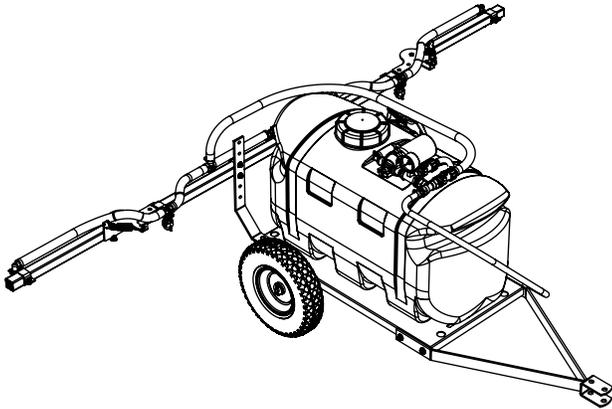

**BEFORE RETURNING THIS PRODUCT
FOR ANY REASON, PLEASE CALL**

HOPKINSVILLE, KY: 800-637-7172

DOTHAN, AL: 800-227-4098

GREENWOOD, MS: 800-844-4524

IF YOU SHOULD HAVE A QUESTION OR EXPERIENCE A
PROBLEM WITH YOUR AG SPRAY PRODUCT GIVE US A CALL.

**BEFORE YOU CALL, PLEASE HAVE THE FOLLOWING
INFORMATION AVAILABLE: SALES RECEIPT & MODEL
NUMBER. IN MOST CASES, AN AG SPRAY EMPLOYEE
CAN RESOLVE THE PROBLEM OVER THE PHONE.**

General Information

Thank you for purchasing this Ag Spray product. The purpose of this manual is to assist you in operating and maintaining your lawn & garden spot sprayer. Please read it carefully, as it furnishes information which will help you achieve years of trouble-free operation.

Warranty/Parts/Service

Products are warranted for one year from date of purchase against manufacturer or workmanship defects.

Commercial users have a 90 day warranty.

Your authorized dealer is the best source of replacement parts and service. To obtain prompt, efficient service, always remember to give the following information...

- Correct Part Description and/or part number.
- Model number/Serial number of your sprayer.

Part descriptions and part numbers can be obtained from the illustrated parts list section(s) of this manual.

Whenever you need parts or repair service, contact your distributor/dealer first. For warranty work, always take your original sales slip, or other evidence of purchase date, to your distributor/dealer.

Technical Specifications

- 25 Gal. Corrosion-Resistant Polyethylene Tank
- 12 Volt Diaphragm Pump, 1.8 g.p.m. - 60 p.s.i.
- Aluminum Pistol-Grip Handgun (43LA-AL6)
- 15 Ft. Handgun Hose
- 5-Nozzle Boom with 100" Spray Coverage
- Bypass Line (for Pressure Control) / Pressure Gauge
- 4.10/3.50 x 6" Pneumatic Tires

Assembly

Your sprayer has been mostly assembled at the factory.

A couple of requirements will be for you to hook up your battery leads to a fully charged 12 Volt battery. The red wire must be connected to the "hot" lead, and the black wire should be connected to the ground.

Bolt the tongue to the frame with the hardware provided. (see exploded view)

Affix the tires over the axles (valve stem out) and secure in place with the provided washer/cotter pins.

Remove the drain plug assembly and handgun clips from the parts bag and place them onto the tank as shown in the exploded view drawing.

Remove the pressure gauge from the parts bag and thread it into the gauge "TEE" on the pressure side of the pump. Use a good grade of thread sealant, to insure no leaks.

Attach the boom brackets to the frame, then attach the boom to the boom brackets. Use the hardware shown.

Route the boom feeder hose back to the boom, attaching it to the "TEE" fitting on the boom. Secure in place with a hose clamp.

CAUTION: Always check the vehicle load rating before using this sprayer. Do not exceed the recommended rating.



AG SPRAY
EQUIPMENT

www.agspray.com

1100 New Industry Lane 104 Eastman Street 1563 S. Oates Street
Hopkinsville, KY 42240 Greenwood, MS 38930 Dothan, AL 36301
P: 800-637-7172 P: 800-844-4524 P: 800-227-4098
F: 270-885-7392 F: 662-455-4442 F: 334-673-1974

Form No. 1964 [5008276 (01/10)] Printed in the U.S.A.

Operation

Your sprayer may be equipped with (2) ON/OFF switches. One on the wire assembly that you hook up to your battery, the other is on the pump itself, on the opposite end of the pressure switch. The "-" is the "ON" position and the "o" is the "OFF" position for the switches. Make sure both switches are depressed in the "-" position for operation.

In addition to the ON/OFF switch, the pump is equipped with an electronic pressure switch that is factory pre-set for it to shut off at 60 p.s.i.. This switch assembly is the 'square box' on the head portion of the pump.

Always fill the tank with a desired amount of water first, and then add the chemical slowly, mixing as you pour the chemical into the tank. You may use the handgun to spray into the solution in order to mix the chemical and water.

Initially begin spraying by opening the handgun. This will enable the air in the line to be purged through the handgun tip, while building pressure.

The pumping system draws solution from the tank, through the strainer/filter, and to the pump. The pump forces the solution under pressure to the handgun and/or boom nozzles.

- Open the handgun by squeezing the handle lever.
- Rotating the adjustable nozzle tip on the handgun will change the tip pattern from a straight stream to a cone pattern (finer mist).

After Spraying

After use, fill the sprayer tank part way with water. Start the sprayer, and allow the clear water to be pumped through the plumbing system and out through the spray nozzles. Refill the tank about half full with plain water and use a chemical neutralizer, such as 'Nutra-Sol', or equivalent, and repeat cleaning instructions above. A mix of water and some good quality dish detergent would be a sufficient alternative.

Flush the entire sprayer with the neutralizing/cleaning agent, then flush out one more time with plain water. Follow the chemical manufacturer's disposal instructions of all wash or rinsing water.

For the boom, (if applicable) remove the tips and screens from the nozzle assemblies. Wash these items out thoroughly. Blow the orifice clean and dry. If the orifice remains clogged, clean it with a fine bristle (NOT WIRE) brush, or with a toothpick. Do not damage the orifice. Water rinse and dry the tips before storing.

WARNING: Some chemicals will damage the pump valves if allowed to soak untreated for a length of time! ALWAYS flush the pump as instructed after each use.

Troubleshooting the Pump:

Pump will NOT run:

- Check inline fuse on the wires on the pump.
- Make sure on/off switch is in the 'on' position (-).
- Make sure you 12 volt source (battery) is fully charged.
- Insure a tight connection at the battery clips.

If none of the above will work, try pulling the wires off the pressure switch, and short them out. If your pump runs when you do this, you know you will need to replace your pressure switch.

Pump runs, but does not prime:


- Check line strainer (screen) in the tank, connected to the bottom of the intake tube. Periodically take the screen at this location out and clean it.
- Make sure the bypass line valve is closed, to allow the pressure to build up in your system. (If equipped with bypass)

Winter Storage


Drain all water out of your sprayer, paying special attention to the pump, handgun, and valve(s). These items are especially prone to damage from chemicals and freezing weather.

The sprayer should be winterized before storage by pumping a solution of RV antifreeze through the entire plumbing system. This antifreeze solution should remain in the plumbing system during the winter months. When spring time comes and you are preparing your sprayer for the spray season, rinse the entire plumbing system out, clearing the lines of the antifreeze solution. Proper care and maintenance will prolong the life of your sprayer.

- Unscrew the head portion of your pump and remove the check valve assembly from inside. You need to make sure the O-Ring comes out with this piece as well. (See the exploded view to help identify these components) These pieces can be cleaned which, in most cases, will help restore some, if not most, of your prime. Soak this check valve in a solution of hot, soapy water. A good name-brand dishsoap works well for this. A little bit of 'scrubbing' with perhaps an old toothbrush may be required to actually break up any build-up that may be on the check valve. Rinse off the pieces and replace them back into your pump. Reassemble the pump. Hook it back up and test.


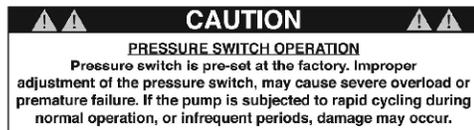


Exploded View/Parts List:
ShurFlo Pump (Model No: 8000-543-936)
FIMCO Part No: 5273232

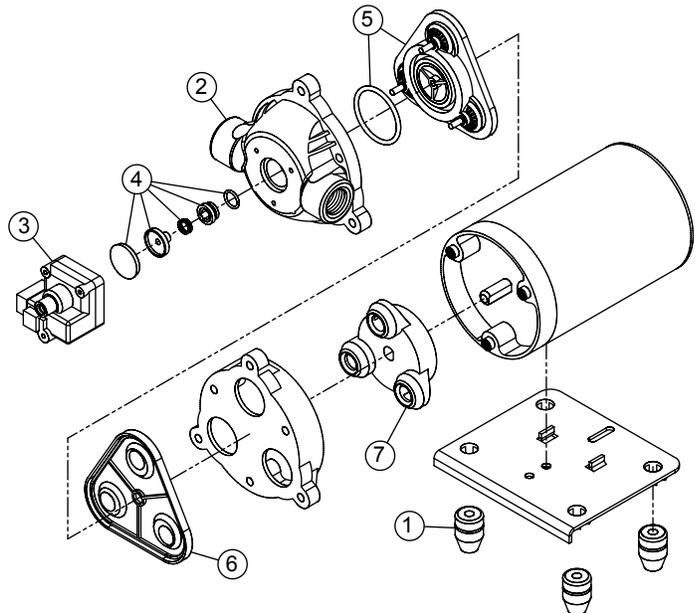


ITEM NO.	FIMCO PART No.	MFG PART NUMBER	QTY.	DESCRIPTION	LIST PRICE
1	5075019		1	Pkg. (4) Grommets	2.99
2	5084089	94-379-00	1	Upper Housing	17.85
3	5157114	94-375-05	1	Switch Assembly	25.44
4	5168759	94-374-05	1	Check Valve Kit	10.25
5	5168760	94-390-05	1	Valve Assembly	39.11
6	5168761	94-395-06	1	Diaphragm	17.60
7	5168762	94-385-03	1	Drive Assembly	30.10

Exploded View Model: AG25LG5FHGD-GR

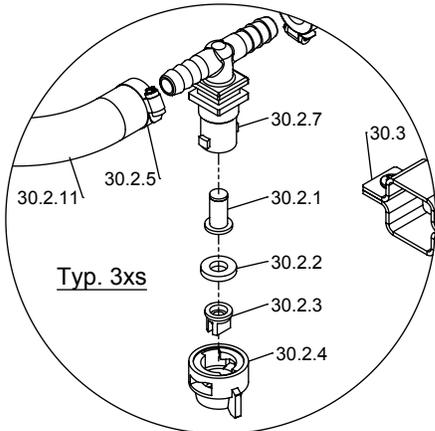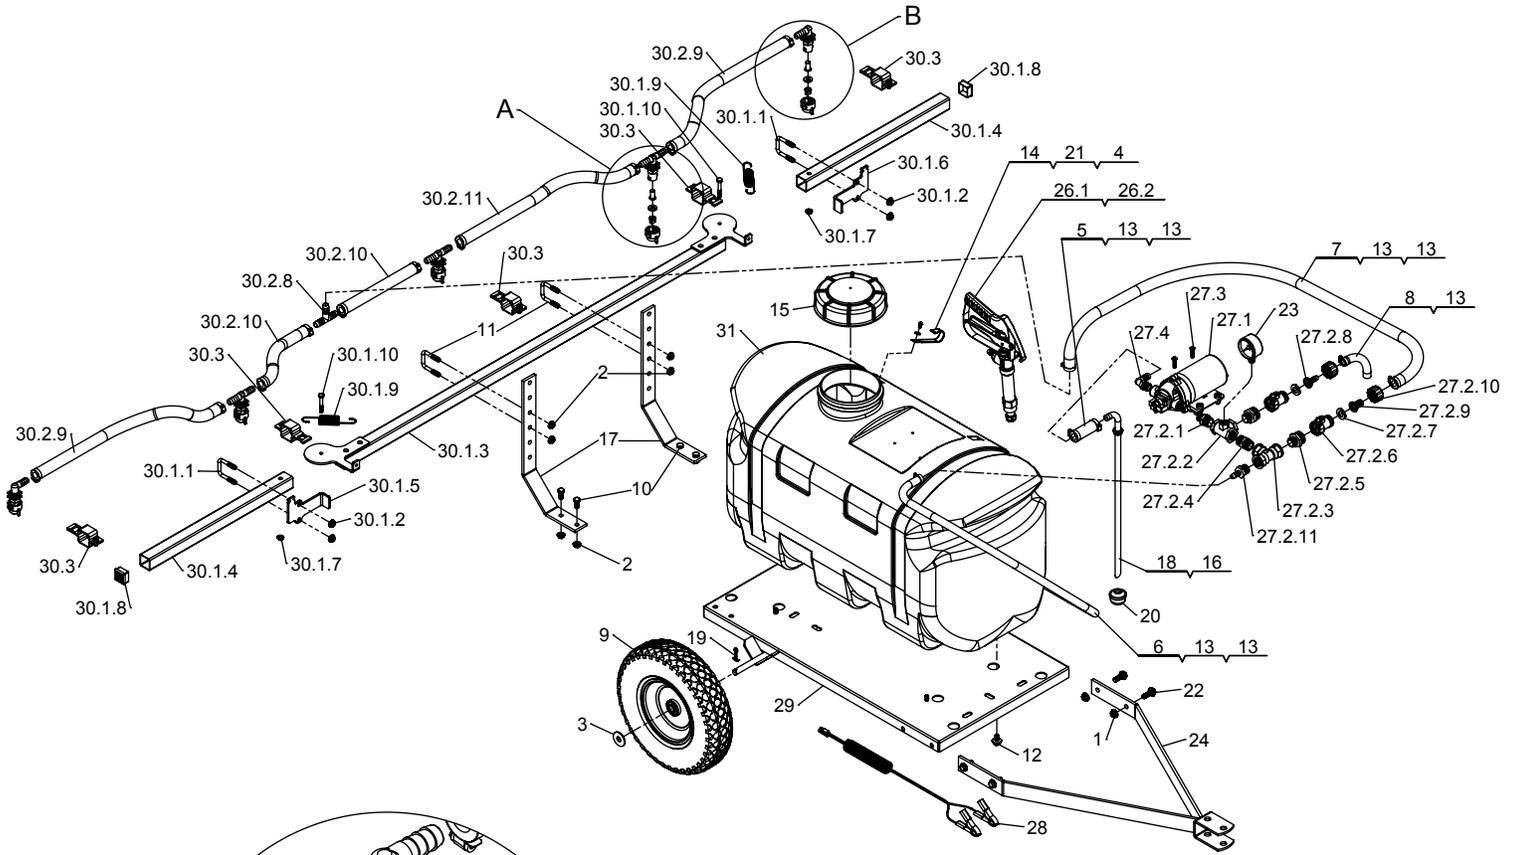

DETAIL A

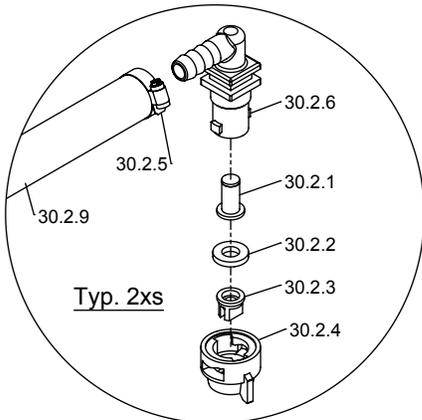

DETAIL B

Speed Chart			
	Time Required in seconds to travel a distance of:		
Speed in M.P.H. (Miles per Hour)	100 Ft.	200 Ft.	300 Ft.
1.0	68 sec.	136 sec.	205 sec.
2.0	34	68	102
3.0	23	45	68
4.0	17	34	51
5.0	14	27	41
6.0	11	23	34
7.0	9.7	19	29
8.0	8.5	17	26
9.0	7.6	15	23
10.0	6.8	14	20

Rate Chart for 8002 Spray Tip										
Tip No.	Spray Height	Pressure (psi)	Capacity (GPM)	Gallons Per Acre - Based on Water						
				1 MPH	2 MPH	3 MPH	4 MPH	5 MPH	7.5 MPH	10 MPH
2	18"	20	.14	41.8	20.9	14.0	10.5	8.4	5.6	4.2
		30	.17	51.2	25.6	17.2	12.9	10.3	6.9	5.1
		40	.20	59.2	29.6	19.8	14.9	11.9	7.9	5.9
		50	.23	66.4	33.2	22.2	16.6	13.3	8.8	6.6
Tip No.	Spray Height	Pressure (psi)	Capacity (GPM)	Gallons Per 1000 Sq. Ft. - Based on Water						
				1 MPH	2 MPH	3 MPH	4 MPH	5 MPH	7.5 MPH	10 MPH
2	18"	20	.14	.96	.48	.32	.24	.19	.13	.10
		30	.17	1.18	.59	.39	.30	.24	.16	.12
		40	.20	1.36	.68	.45	.34	.27	.18	.14
		50	.23	1.52	.76	.51	.38	.31	.20	.15
Tip No.	Spray Height	Pressure (psi)	Capacity (GPM)	Gallons Per 100 Sq. Ft. - Based on Water						
				1 MPH	2 MPH	3 MPH	4 MPH	5 MPH	7.5 MPH	10 MPH
2	18"	20	.14	.096	.048	.032	.024	.019	.013	.010
		30	.17	.118	.059	.039	.030	.024	.016	.012
		40	.20	.136	.068	.045	.034	.027	.018	.014
		50	.23	.152	.076	.051	.038	.031	.020	.015

Parts List Model: AG25LG5FHGD-GR

ITEM NO.	PART NUMBER	QTY.	DESCRIPTION	LIST PRICE
1	5006259	4	3/8"-16 Hex Whiz (Flange) Locknut	.25
2	5006307	8	5/16"-18 Hex Whiz (Flange) Locknut	.25
3	5016031	2	Flatwasher, 1/2"	.25
4	5016035	1	Lockwasher, 1/4"	.25
5	5020060	1	Hose, 1/2"-1 Brd. x 2 3/4"	.64
6	5020215	1	Hose, 3/8"-1 Brd. x 15 Ft.	8.50
7	5020389	1	Hose, 1/2"-1 Brd. x 43"	5.78
8	5020490	1	Hose, 3/8"-1 Brd. x 7 1/4"	1.25
9	5021045	2	Tire/Wheel (410/350 x 6" x 2-1/4" Offset) (White)	26.95
10	5034038	4	H.H.C.S., 5/16"-18 x 3/4"	.55
11	5034159	2	Square U-Bolt, 5/16" x 1 5/16" x 1 7/8"	.99
12	5034531	4	5/16"-18 x 5/8" Flange Lock Screw	.44
13	5051114	7	Hose Clamp, 3/8"	.63
14	5053108	1	J-Clip	
15	5058189	1	5" Lid (NO Lanyard)	10.50
16	5075018	1	Grommet	1.00
17	5095071	2	Boom Mount	7.25
18	5100532	1	Intake Tube: 1/2" OD x 3/8" ID x 18 1/4" (25 Gallon)	
19	5101207	2	Cotter Pin, 5/32" x 1 3/4"	.10
20	5116251	1	Strainer, Suction Line	1.99
21	5117293	1	#10-24 x 3/8" Machine Screw, Phillips Round Head	.25
22	5117307	4	3/8"-16 x 1" Whiz (Flange) Lockscrew	.46
23	5167007	1	Gauge, 0-100 p.s.i.	6.25
24	5272370	1	Tongue Weldment	23.54
25	5274373	1	Drain Plug Cap, Tether, and Washer Assembly	2.95
26	5277010	1	Handgun Assembly (43LA-AL6)	
26.1	5163062	1	GunJet Spray Gun (AA43LA-AL6)	129.60
26.2	5067034	1	Steel Fitting: 1/2" MNPT x 3/8" HB	4.46
27	5277037	1	Pump Assembly	
27.1	5273232	1	SHURflo Pump (Model: 8000-543-936)	132.28
27.2	5277060	1	Plumbing Assembly (SHURflo Pump)	
27.2.1	5011128	1	Nylon Reducing Nipple, 1/2" MNPT x 3/8" MNPT	.50
27.2.2	5010193	1	Nylon Tee, 1/2" FNPT w/1/4" Port (Gauge)	11.90
27.2.3	5010113	1	Nylon "Tee" Fitting, 1/2" FNPT	3.09
27.2.4	5011054	1	Nylon Close Nipple, 1/2" MNPT	.41
27.2.5	5005021	2	Nylon Adapter, 1/2" MNPT x 3/4" MGHT	.78
27.2.6	5143188	2	Nylon Shut-Off Valve	3.14
27.2.7	5016066	2	Garden Hose Washer	.20
27.2.8	5149034	1	Poly Swivel, 3/8" Hose Barb	.64

ITEM NO.	PART NUMBER	QTY.	DESCRIPTION	LIST PRICE
27.2.9	5149035	1	Poly Swivel, 1/2" Hose Barb	.50
27.2.10	5006209	2	Poly Knurled Swivel Nut, 3/4" FGHT	.70
27.2.11	5067016	1	Nylon Fitting: 1/2" MNPT x 3/8" HB	.53
27.3	5117168	4	#10-24 x 1" Phillips Truss Head Machine Screw	.25
27.4	5010043	1	Nylon Elbow: 3/8" MNPT x 1/2" HB	.66
28	5277040	1	Battery (Power) Cable (10 Ft. - 14 Gauge)	
29	5277061	1	Frame Weldment (Green)	66.27
30	5301966	1	Generic 5-Nozzle Boom Kit	
30.1	5274361	1	5-Nozzle Boom Sub-Assembly	78.00
30.1.1	5034159	2	Square U-Bolt, 5/16" x 1 5/16" x 1 7/8"	.99
30.1.2	5006307	4	5/16"-18 Hex Whiz (Flange) Locknut	.25
30.1.3	5273990	1	5-Nozzle Boom Weldment (Center Section)	38.00
30.1.4	5009914	2	Outer Boom Tube	7.79
30.1.5	5017660	1	End Plate (R.H.)	4.99
30.1.6	5017659	1	End Plate (L.H.)	4.99
30.1.7	5006344	2	1/4"-20 Flange Locknut	.39
30.1.8	5046344	2	Square Cap, Black (1 1/4" Square Tube)	.21
30.1.9	5019138	2	Extension Spring	1.10
30.1.10	5034204	2	H.H.C.S., 1/4"-20 x 1 3/4"	.25
30.2	5277127	1	QJ Harness Assembly (BA5SQK)	
30.2.1	5116019	5	50 Mesh Nozzle Strainer, Red	1.11
30.2.2	5016157	5	Seat Washer	.40
30.2.3	5018265	5	Flat Spray Tip, Yellow	.84
30.2.4	5046219	5	Quick TeeJet Cap (Yellow)	.61
30.2.5	5051114	10	Hose Clamp, 3/8"	.63
30.2.6	5056065	2	Single Hose Shank (1/2" Hose)	3.84
30.2.7	5056067	3	Double Hose Shank (1/2" Hose)	3.84
30.2.8	5086003	1	Nylon Hose Tee, 1/2" HB	1.06
30.2.9	5020009	2	Hose, 1/2"-1 Brd. x 26"	2.66
30.2.10	5020144	2	Hose, 1/2"-1 Brd. x 10"	1.77
30.2.11	5020306	1	Hose, 1/2"-1 Brd. x 20"	2.21
30.3	5272165	5	Vari-Quick Clamp (1 1/4" Sq. Tube)	2.57
31	TA25Y	1	25 Gallon Tank (Yellow)	72.64

(List Prices are Subject to Change)

Approximate Unit Dimensions

